





Owner's Manual

Please read this manual carefully and thoroughly before operating this unit.



* Source:- ORG-GFK retail audit report: Jan.- Dec. 2008.

The picture shown on Front page is representative model. LG Electronics reserves its right to change, modify or alter any design without any prior notice.

CONTENTS

IMPORTANT SAFETY INFORMATION	2
INSTALLATION	4
OPERATIONS	4
IDENTIFICATION OF PARTS	5
SUGGESTIONS	
SUGGESTIONS ON FOOD STORAGE	6
CLEANING	7
GENERAL INFORMATION	
FEATURES	В
BEFORE CALLING FOR SERVICE	9

IMPORTANT SAFETY INFORMATION

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

R You will be killed or seriously injured if you don't follow instructions.
NG You can be killed or seriously injured if you don't follow instructions.
DN Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

सुरक्षा संबंधी महत्वपूर्ण जानकारी

सुरक्षा संबधी बुनियादी सावधानियां

इस निर्देशिका में सुरक्षा संबंधी अनेक महत्वपूर्ण संदेश दिए गए हैं। हमेशा सुरक्षा संबंधी समी संदेश पढ़ें और उनका पालन करें।

🥂 खतरा	यदि आप निर्देशों का पालन न करें तो आपकी मृत्यु हो सकती है या आपको गंभीर चोट लग सकती है।
\land चेतावनी	यदि आप निर्देशों का पालन न करें तो आपकी मृत्यु हो सकती है या आपको गंभीर चोट लग सकती है।
🕂 सावधानी	किसी आसन्न तौर पर होने वाली खतरनाक स्थिति को दर्शाता है जिनके परिणामस्वरूप, यदि बचाव नहीं किया गया, छोटी–मोटी या औसत चोट लग सकती है, या सिर्फ उत्पाद को क्षति पहुंच सकती है।

सुरक्षा संबंधी सभी संदेश खतरों को चिन्हित करेंगे, जो आपको बताते हैं कि आप चोट लगने की आशंका को कैसे कम कर सकते हैं, और आपको बताते हैं कि यदि निर्देशों का पालन नहीं किया गया तो क्या हो सकता है।

IMPORTANT SAFETY INFORMATION

- Do not modify the power cord length or sharing of outlet with other appliances and don't replace the power cord with the damaged or unspecified power cord. It will cause electric shock or fire. If the power cord is damaged, it should be replaced by authorized service person as specified by the manufacturer.
- 2. Plug in the power socket properly. Loose plug-in causes electric shock or fire due to heat generation.
- 3. Do not switch ON/OFF the refrigerator with wet hands. It may cause electric shock.
- Use only dedicated power socket for supply to refrigerator. Do not use an extension cord; otherwise it will cause overloading
 and intermittent tripping of other appliances or household lights.
- 5. Never splash water on your refrigerator. It may cause short circuit.
- Grounding (Earthing). In the event of an electric short circuit, grounding (Earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Consult a qualified electrician or service person if you have doubts on whether the appliance is properly grounded. Improper use of the grounding plug can result in an electric shock.
- 7. Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull it straight out from the outlet.
- 8. When moving your appliance away from the wall, be careful not to roll over the power cord or damage it in any way.
- 9. Unplug the power cord from outlet for cleaning or other requirements. Never touch it with wet hands because you can get an electric shock or be hurt.
- 10. Never damage, process, pull out, or twist the power cord, because damage of power cord may cause a fire or electric shock.
- 11. Do not place the lit candle within the refrigerator to deodorize. It may cause explosion or fire.
- 12. Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator. It may cause explosion or fire.
- 13. When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center. It may cause fire.
- 14. The refrigerator should be so positioned that the supply plug is accessible for quick disconnection when accident happens.
- 15. When disposing the refrigerator, remove the packing materials from the door. It may cause to lock out the child.

- 1. Before use, refrigerator must be properly installed and located as per the installation instructions.
- After your refrigerator is in operation, do not touch the cold surface in the freezer compartment, particularly when your hands are damp or wet. Skin could adhere to these extremely cold surfaces.
- 3. Wait for 5 minutes or longer when reconnecting the plug. (It may cause the operation of the freezer to fail.)
- Do not install the refrigerator in the wet place or the place which water or rain splashes. (Deterioration of insulation of electric parts may cause electric leakage.)
- Because opening or closing the door of the refrigerator may cause injury to the person around it, be careful, please. (Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.)

\land चेतावनी

- कृपया तार को क्षतिग्रस्त तार व अनउल्लेखित तार से न बदले । (यदि तार क्षतिग्रस्त हो जाये तो इसे उत्पादक द्वारा निर्धारित सर्विस अधिकारी द्वारा ही बदलवाये ।
- ढीला लगाया गया प्लग से करंट व आग लगने का खतरा है।
- 3) गीले हाथो से Ref. को On/Off न करे।
- 4) Ref. के विद्युत प्रवाह के लिये निर्धारित साकेट का प्रयोग करे। (कृपया राक्सटेन्सन का प्रयोग न करे इससे घर के दूसरे विद्युत उपकरणोपर Load भार व अनियमित Tripping हो सकते है।
- 5) Ref. से पानी न गिरनें दें । इससे शॉर्टसर्किट हो सकता है ।
- 6) आर्थिंग : विद्युत शार्ट सर्किट के दौरान आर्थिंग द्वारा झटके का खतरे को कम किया जा सकता है । इसलिये मशीन का आर्थिंग अनिवार्य है । कृपया किसी निर्धारित व दक्ष इलेक्ट्रिशियन द्वारा अपनी मशीन को आर्थिंग करवाये ।
- 7) कृपया Ref. को बंद करने के लिये तार न खीचे। प्लग को पकड़ कर इसे साकेट से निकालिये।
- 8) कृपया तार को सुरक्षित रखते हुये, अपने Ref. को हिलाईये।
- 9) सफाई व अतिरिक्त कार्य हेतू, Ref. के तार को साकेट से निकालिये। गीले हाथ से इसे न छूये।
- 10) तार को खीचना व लपेटना व मोड़ना मना है।
- 11) दुर्गंध दूर करने के लिए रेफ्रिजरेटर के अंदर जलती हुई मोमबत्ती न रखें । (इससे विस्फोट हो सकता है या आग लग सकती है ।)
- 12) रेफ्रिजरेटर के पास या अंदर ज्वलनशील पदार्त ईथर, बेंजीन, अल्कोहोल, दवा, एलपी गैस, स्प्रे या कॉस्मेटिक्स का प्रयोग या भंडारण न करें । (इससे विस्फोट हो सकता है या आग लग सकती है ।)
- 13) जब रेफ्रिजरेटर से किसी अजीब गंध या धुआं निकलने का पता चले, तो पॉवर प्लग को तुरंत अलग कर दें और सर्विस सेंटर से संपर्क करें । (इससे आग लग सकती है ।)
- 14) रेफ्रिजरेटर इस स्थिति में रखा रहना चाहिए ताकि दुर्घटना होने पर सप्लाई प्लग को तुरंत डिस्कनेक्ट करने के लिए उस तक आसानी से पहुंचा जा सके ।
- 15) रेफ्रिजरेटर का निस्तारण करते समय, दरवाजे से पैकिंग मैटीरियल को निकाल दें। इसके कारण कोई बच्चा भीतर बंद हो सकता है।

\land सावधानी

- 1) प्रयोग से पहले कृपया मशीन का नियमित सूचना के अनुसार स्थापना करवाये।
- 2) Freezer की कार्यरत Ref. के ठंडी सतह को गीले हाथो से न छूये इससे अपनी त्वचा इस ठंडी सतह पर चिपक सकती है।
- 3) प्लग दुबारा लगाते सम 5 मिनट या इससे अधिक इंतजार करें । (इससे फ्रीजर का प्रचालन नाकाम हो सकता है ।
- 4) रेफ्रिजरेटर को किसी गीले या ऐसे स्थान पर संस्थापित न करें जहां पानी या बरसात के छींटे आते हों । (बिजली के पुर्जों के इंसुलेशन का क्षरण होने के कारण बिजली का रिसाव हो सकता है ।)
- 5) रेफ्रिजरेटर के दरवाजे को खोलने या बंद करने से आस-पास के व्यक्ति को चोट लग सकती है, इसलिए कृपया सावधानी बरतें । (दरवाजे को खोलने या बंद करने से हाथ या पैर दरवाजे की दरार में फंस सकते हैं या बच्चे को कोने से चोट लग सकती है ।)

Installation

1. INSTRUCTION

- Unpack the refrigerator and locate at desired location.
- Refrigerator should be located properly in ventilated area.
- Avoid placing the unit near heat sources, direct sunlight or moisture.
- Prior to storing food, leave your refrigerator on for 2 or 3 hours.
- Don't install this appliance below 5 °C. It may cause the debasement of the refrigerator.
- रेफ्रिजरेटर को खोलने और इच्छित स्थान पर रखना ।
- रेफ्रिजरेटर ऐसे स्थान पर रखा होना चाहिए जहां हवा को आवागमन अच्छी तरह होता हो ।
- युनिट को गर्मी के स्रोतों, सीधी धूप या नमी के निकट रखने से बचें ।
- खाद्य-पदार्थ भंडारित करने से पहले, अपने रेफ्रिजरेटर को चालू करके 2 या 3 घंटे के लिए छोड़ दें ।
- इस उपकरण को 5 °C से कम पर संस्थापित न करें । इससे रेफ्रिजरेटर का डिबेसमेंट हो सकता है ।

2. LEVELLING

Levelling of refrigerator should be done with front leg. Refrigerator should be levelled with front to back inclination for base.

रेफ्रिजरेटर के स्तर को निश्चित करने के लिए कम या अधिक करने वाले पैर की सहायता लेनी चाहिए । इसको जमीन पर सुस्थिर करने के लिए इस प्रकार व्यवस्थित करना चाहिए कि यह थोड़ासा आगे पीछे की ओर झुका हो ।

Operation

Refrigerator Temperature Control

Specially designed knob gives your facility to control temperature inside Refrigerator.

रेफ्रिजरेटर तापमान नियन्त्रण विशेष रूप से निर्मित नॉब जो आपको रेफ्रिजरेटर के अन्दर तापमान को नियन्त्रित करने की सुविधा प्रदान करता है ।

Defrosting

It is natural for moisture in the air to condense on the cold surface. This leads to a regular build up of frost on the surface of the freezer and the cooling in the fresh food compartment. This frost accumulation reduces the cooling effect, thereby reducing efficiency. Therefore, periodic defrosting is necessary to ensure optimum performance.

★ The water in the drain tray evaporates by natural evaporation if defrosting is done once in two days. However, due to varied conditions of usage it is desirable to check the drain-tray occasionally and dispose of the water, if any, Please ensure that the chiller tray is in its correct position by pushing it to its correct position by pushing it to its extreme. Otherwise the defrosting water may fall over the contents of the refrigerator.

★ Manual Defrosting : However in some models, in case of defrosting or power failure the water directly accumulates in chiller tray, dispose off water directly from chiller tray by taking it out.

डीफ्रॉस्ट कैसे करें :


हवा में मौजूद नमी का ठंडी सतह पर जमना स्वाभाविक है, इसलिए भोजन ताजा रखने वाले कंपार्टमेंट की कूलिंग कॉइल पर और फ़्रिजर की तरह पर बर्फ जमती रहती है. बर्फ की जमावट के कारण कम ठंडक उत्पन्न होती है और क्षमता घट जाती है. इसलिए बेहतरीन कार्य संचालन के लिए समय–समय पर डीफ्रॉस्टिंग बेहद जरूरी है.


★ ड्रेन ट्रे में इकट्ठा होने वाला पानी कुदरती तौर पर ही वाष्पीकृत हो जाता है. फिर भी, चूकि इस्तेमाल करने के हालात बदलते रहते हैं इसलिए बेहतर ये है कि समय–समय पर ड्रेन ट्रे को देख लें और पानी इकट्ठा हो तो फेंक दें. कृपया चिलर ट्रे को अंतिम स्थिति तक सरकाकर ये सुनिश्चित कर लें कि चिलर ट्रे अपनी सही जगह पर रहे. वरना डीफ्रॉस्ट होने वाला पानी रेफ्रिजरेटर में रखी गई सामग्री पर गिरेगा ।


★ मैनुअल डिफ्रॉस्टिंग : यदि कुछ मॉडलों में डीफ्रॉस्टिंग या बिजली न होने पर कुछ समय बाद पानी सीधा चिलर ट्रेमें इकट्ठा हो जाता है तो चिलर ट्रे को बाहर निकालकर पानी को फेंक दें।

ICE MAKING / बर्फ कैसे बनाएं

- Fill ice trays with water, place in Freeze Box.
- To remove ice cube, gently twise Ice Tray.
- बर्फ की ट्रे को पीनी से भरें और इसे फ्रीज बॉक्स में रखें ।
- बर्फ निकालने के लिए बर्फ की ट्रे को हल्के से मरोडें ।










Note : Push the Defrost Knob after every 2 days / Ice Level reaches defrost indicator. नोट : प्रत्येक 2 दिव में डिफ्रॉस्ट नॉब को दवाकर डिफ्रॉस्ट करें / जब भी बर्फ डिफ्रॉस्ट नियात तक पहुँचे ।




IDENTIFICATION OF PARTS



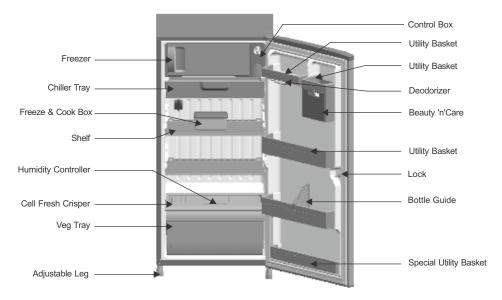

GL-245 / GL-285

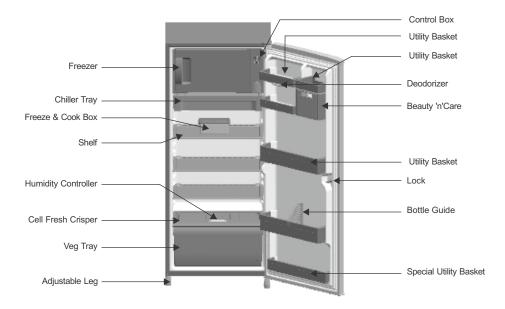

* Due to continuous R&D, model specification subjected to change.

SUGGESTIONS

- Don't open the refrigerator door too often-hot air will enter and increase the temperature.
 रेफ्रिजरेटर का दरवाजा बार-बार न खोलें। इससे गर्म हवा अंदर जाती है और तापमान बढा देती है।
- Don't keep the door open for more than 30 seconds at a time-cold air will rush out of the fridge. दरवाजे को ३० सेकंड से ज्यादा न खोलें, ठंडी हवा बाहर निकलेगी ।
- If refrigerator door is open more than 60 sec door chime will start ringing to draw your attention. Please close the door immediately & Do not re open the door within 5 Sec to avoid continuos ringing of alarm.
 यदी रेफ्रिजरेटर का दरवाजा ६० सेकंड से ज्यादा देर खुला रहा तो वह आपका ध्यान अलाम देकर आकर्षित करेगा । कृपया दरवाजे को तूरंत बंद करे और ५ सेकंद के अंदर उसे दुबारा न खोलें, नहीं तो लगातार अलाम बजता रहेगा।
- Don't cover the shelves with paper or plastic sheets. This prevents air circulation inside the cabinet.
 शैल्फ को कागज या प्लास्टिक की पत्रीसे न ढके अन्यथा फ्रिज में हवा का प्रवाह रुक जायेगा ।
- Don't use a knife or sharp instrument to remove the ice trays from the freezer or to remove the frost mechanically
 as it may damage the freezer coil.
 जलदी डीफ्रॉस्टिंग करने के लिए या फ्रिजर में से बर्फ की ट्रे निकालने के लिए चाकू या किसी और नुकीले उपकरण का इस्तेमाल न करें,

इससे फ्रीजर कॉइल को नुकसान पहुँचेगा ।

- Fridge will automatically switched off when the proper temperature is attained. Don't switch off the fridge at night, this will create higher temperature inside the cabinet thus deteriorating stored foods.
 उपयुक्त तापमान तक पहुचने के बाद ये अपने आप बंद हो जायेगा। रात में फ्रिज का स्विच ऑफ न करें, इससे केबिनेट में तापमान बढ जाएगा और रखा हआ खाद्य पदार्थ खराब हो जाएगा।
- Feel free to call your LG Dealer or LG Representative in case your refrigerator has suffered and damage in transit.
 The Dealer or the Company Representative will assess the extent of damage and give you an estimate for repairs.

रेफ़्रिंजरेटर को एक जगह से दूसरी जगह ले जाने में अगर कोई नुकसान हो जाए तो अपने LG डीलर या LG के प्रतिनिधि नुकसान देखकर मरम्मत के खर्चे का अनुमान आपको बता देंगे।

- Don't switch on the refrigerator, unless a minimum period of four minutes lapses after it was switched off, either due to power failure or otherwise.
- विद्युत आपूर्ति बंद हो जाने या किसी और कारण से ऑफ हो जाने की दशा में चार मिनट हो जाने तक स्विच ऑन न करें।
- Don't allow food stuffs smeared with salt to come in direct contact with the freezer. It is a good practice to always keep the food in a container before placing in the freezer.
 नमक लगे खाद्य पदार्थों को सीधे फ्रीजर के संपर्क में न आने दें। खाद्य पदार्थों को कन्टेनर में रखना एक अच्छी बात है।
- It is recommended to use Voltage Stabilizer (0.5KVA) if power fluctuations are frequent and out of specified voltage range (135-290V)**. Stabilizer usage increases the refrigerator life.
 यदि बिजली बार-बार कम या ज्यादा आ रही है या निर्दिष्ट वोल्टेज क्षमता (135-290V)** से भिन्न है तो यह सलाह दी जाती है कि वोल्टेज स्टेबिलाइजर (0.5KVA) का प्रयोग करें । स्टेबिलाइजर का इस्तेमाल रेफ्रिजरेटर की उम्र बढाता है ।

SUGGESTIONS ON FOOD STORAGE

- Don't keep hot milk or hot food in your refrigerator. This will result in an increased temperature of other food in the fridge and may lead to deterioration. गर्म दध या गर्म भोजन को अपने रेफ्रिजरेटर में न रखें इससे दसरे खाद्य पदार्थों का तापमान भी बढ सकता है । और वो खराब भी हो सकते है।
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons. कम तापमान पर आसानी से खराब होने वाले खाद्य-पदार्थ जैसे केले, अनानास, और तरबूज न रखें।
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
 खाद्य-पदार्थ रखते समय उसे वाइनिल रैप से ढकें या ढक्कन वाले पात्र में रखें । इससे नमी का वाष्पीकरण नहीं होता, और खाद्य-पदार्थों के स्वाद और पौष्टिक तत्व बने रहते हैं ।
- Do not store bottles in the freezer compartment they may break when frozen. बोतलों को फ्रीजर कंपार्टमेंट में न रखें – जब जाने पर वे टूट सकती हैं।
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack. आईसक्रीम जैसे फ्रोजन खाद्य-पदार्थों को लंबे समय तक रखते समय, उन्हें डोर रैक में नहीं, बल्कि फ्रीजर शेल्फ में रखें।
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, andpacked food should be wiped clean, to prevent adjacent food from spoiling. खाद्य-पदार्थों को रेफ्रिजरेटर में रखने से पहले हमेशा साफ कर लें । सब्जियों और फलों को धोकर पोंछ लेना चाहिए, तथा पैक किए हुए खाद्य-पदार्थों को पोंछकर साफ कर लेना चाहिए, ताकि पास रखे अन्य खाद्य-पदार्थ खराब न हों ।
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a up-right position, which keeps them fresh longer. अंडों को उनके स्टोरेज रैक में रखते समय, सुनिश्चित कर लें कि वे ताजे हैं, और उन्हें हमेशा खड़ी स्तिति में रखें, जिससे वे अधिक समय

तक ताजे रहते हैं ।

** As per LGIEL test standards.

** एल्जी इंडिया इलेक्ट्रॉनिक्स लि. मान्यतानुसार

CLEANING / सफाई

EXTERIOR -Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

बाहरी – अपने रेफ्रिजरेटर को मन्द साबुन/डिटर्जेट के गुनगुने घोल से साफ करें । उसके बाद उसे साफ-सुथरे कपडे से पोछें और फिर सुखाएं ।

INTERIOR - Regular cleaning of the interior and interior parts is recommended. If you have the Wash all compartments with a mild baking soda solution, then rinse and dry the compartment.

आन्तरिक – आन्तरिक एवं आन्तरिक पार्टे को हमेशा सफाई की सलाह दी जाती है। यदि आप सभी हिस्सों को सोडा से धोते हो तो उसे साफ पानी से धोएं और सुखाएं।

🕂 WARNING / सावधानी

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts(lamps, switches, controls, etc.).

Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning Not in use : Surface active agent, Car wax, Anticorrosive, All sorts of oil, Gasoline, Acids, Wax.
- Usable Detergent Vegetable dish washable solution, Soapy water
- When careless using, it can occur a color change.

बिजली के पुर्जों (लैंपों, स्विचों, कंट्रोल, आदि) के आस-पास सफाई करने से पहले दीवार के आउटलेट से पॉवर कॉर्ड को हमेशा ही निकाल दें। पानी या द्रव को किसी बिजली के पुर्जे में प्रवेश करने और बिजली का झटका लगने से बचेने के लिए अतिरिक्त नमी को स्पंज या कपड़े से पोंछ दें। ज्वलनशील या विषैले क्लीनिंग द्रवों का प्रयोग न करें।

- सफार्स के लिए इन पदार्थों का प्रयोग न करें : सतह पर क्रियाशील अभिकारक, कार वैक्स, एंटीकोरोसिव, हर किस्म के तेल, पेट्रोल, एसिड, वैक्स।
- इनका प्रयोग किया जा सकतौ : डिटर्जेंट वनस्पति बर्तन धोने के घोल, साबुन का पानी ।
- लापरवाही से प्रयोग करने पर इनके कारण रंग बदल सकता है ।

GENERAL INFORMATION / सामान्य जानकारी

VACATION TIME - During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan to be away for an extended period remove all food, disconnect the power cord, clean the interior throughly and leave each door OPEN to prevent odour formation.

काम के दौरान आराम का समय – औसतन फ्रिज़ बन्द के दौरान, आप सम्भवत: सबसे अच्छा, रेफ्रिजरेटर को चलाने के समय पाएंगे,

फ्रिजेबल सामानों को फ्रिजर में लम्बे अवधि के लिए रख दें। जब आप कुछ समय के लिए बाहर हों, सभी खाद्य पदार्थों को निकाल लें, तथा विद्यत तार को निकाल दें। आन्तरिक रूप से पूरी सफाई करें और प्रत्येक दरवाजे को खोल दें, जिससे दुर्गन्ध न हो।

POWER FAILURE - Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

विद्युत अनापूर्ति – अधिकतर विद्युत कटने से, जो एक घंटा या दो घंटो में होती है, आपके रेफ्रिजरेटर के तापमान को प्रभावित नहीं करेगी ।

फिर भी आप को विद्युत नहीं रहने के दौरान दरवाजे को कम से कम खोलना चाहिए । जब विद्युत लम्बी अवधि के लिए न हो तो सूखे बर्फ का एक ब्लाक अपने फ्रिजर पैकेजेज के ऊपर रखें।

IF YOU MOVE - Remove or securely fasten down all loose items inside the refrigerator. To avoid damaging the leveling screws, turn them all the way into the base.

स्थानांतरण – रेफ़्रिजरेटर के अन्दर से सभी खुले हुए सामानों को निकाल लें या सुरक्षापूर्वक उन्हे बांध दें । लेवल करने वाले पेचों के नुकसान को रोकने के लिए उन्हें सतह से मिलाकर कस दें ।

DISPOSAL OF THE OLD APPLIANCE - This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

पुराने उपकरण का निस्तारण – इस उपकरण में तरल पदार्थ (रेफ्रिजरेटर, ल्युब्रिकेंट) है और यह ऐसे पुर्जों तुा सामग्रियों से बना है जिनका दुबारा प्रयोग हो सकता है और/या रिसाइकिलिंग की जा सकती है ।

सभी महत्वपूर्ण सामग्रियों को कचरा संग्रह केंद्र में भेजा जाना चाहिए और रिवर्क (रिसाइकिलिंग) के बाद दुबारा प्रयोग में लाया जा सकता है । वापस लिए जाने के लिए, कुपया स्थानीय एजेंसी से संपर्क करें ।

Features

★ DEODORIZER / डिओडोराइजर

LG Refrigerator unique Deodorizer filter located in the "Basket", which removes bad odour from the food when kept for long time. एलजी रेफ्रिजरेटर में डिओडोराइजर एक विशेष फिल्टर होता है जो बास्केट में स्थित होता है। यह रेफ्रिजरेटर के भीतरी वातावरण को ताजा रखनें में सहायक है।

★ BEAUTY AND CARE / सौन्दर्य एवं सुरक्षा*

- It is placed in the refrigerator compartment and can be used for storing medicines and cosmetics यह रेफ्रिजरेटर कम्पार्टमेंट में रखा जाता है तथा औषधियां और सौन्दर्य प्रसाधन रखने में प्रयोग किया जा सकता है ।
- Only those medicines which are supposed to be stored in refrigerator. केवल वे औषधियां जिन्हें रेफ्रिजरेटर में रखना जरूरी है ।

★ FREEZE & COOK BOX / फ्रिज और कुक बॉक्स*

- Semi air tight box is use to store food in hygiene condition. अर्ध वायु रहित बॉक्स में खाना स्वास्थ्यदायक दशा में रखने के लिए रखा जाता है ।
- Boxes are apt to microwave oven and can be used for heating. बॉक्स माइक्रोवेव ओवन के लिए सक्षम है और उनको खाना गर्म करने के लिए प्रयोग किया जा सकता है ।
 Boxes should not be used in microwave oven under grill setting.

1 प्रिल की सैटिंग में बॉक्स का माइक्रोवेव ओवन में प्रयोग नहीं करना चाहिए ।

Note : Freeze & Cook Box to be kept on shelf./ फ्रिज और कुक बॉक्स शेल्फपर रखे।

* EGG-CUM-ICE TRAY / अण्डा एवं आइस ट्रे*

lt is used for storing the eggs. It can also be used for making the ice. इसका इस्तेमाल अण्डे रखने के लिए किया जाता है । इसका इस्तेमाल बर्फ बनाने के लिए भी किया जा सकता है ।

★ FASTEST ICE TRAY / शिघ्र आइस ट्रे*

Specially design Ice Tray for making ice 20% faster than conventional ice tray* यह विशिष्ट तरीके से संरचित बर्फ का ट्रे है, जो की सामान्य ट्रे से २०% प्रतिशत कम समय मे बर्फ बनाता है ।*

★ SOFT TRAY VEG. / सॉफ्ट ट्रे वेज

Soft Tray Veg. is placed in Tray Veg. and very usefull to keep small vegetables like Lemon. Chilly, Coriander etc. ट्रे वेज में रखी सॉफ्ट ट्रे वेज छोटी सब्जियाँ जैसे नींबू, मिर्च, धनिया आदि रखने में बहत उपयोगी है।

★ CELL FRESH CRISPER / सेल फ्रेश क्रिस्पर

lt keeps your vegetables fresh by holding moisture & prevents from getting rotten. यह अपने में पानी की बूंदें समाहित करके आपकी सब्जियों को ताजा रखता है व सड़ने से बचाता है।

\star DOOR ALARM / डोअर अलार्म

Chime start ringing & Draw your attention if door open more than 60 sec to avoid cooling loss. यदी ऐफ्रीजरेटर का दरवाजा ६० सेकंद से ज्यादा देर तक खुला रहा तो शितलता की हानी रोकने के लिए डोअर अलाम आपका ध्यान आकर्षित करेगा ।

TEMPERED GLASS / टेंपरड ग्लास

Tempered glass can withstand the load upto 150 kg. / टेंपरड शिशा, १५० कि.ग्रॅ. का भार सहनेकी क्षमता रखता है ।

\star Base Stand with drawer / बेस स्टॅंड ड्रॉवर सहित

To keep onion & potato in drawer upto 6 KG ६ कि.ग्रॅ. तक आलु और प्याज़ रख सकतें है ।

Freezer Lamp

- Unplug the power cord from the outlet.
- To remove the lamp cover, reach behind the lamp cover and pull it forward as shown in Flg.
- Turn the lamp counterclockwise.
- Assemble the reverse order of disassembly.
- Replacement bulb must be the same specifications as original.

Power Cord Replacement : If the supply cord is damaged, it must be replaced by a special cord or assembly from the manufacturer or its authorised service agent.

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance."
















Before Calling for Service

Check for yourself		
Type of Complaint	Probable Cause	Remedy
1. Refrigerator does not work.	 Thermostat switch in 'OFF' position. 	Check that the thermostat knob is on'Normal' (No.4) position and not in off position.
	- Power Supply Off.	Check that the refrigerator main supply plug is connected to the wall socket and that the supply is on. Check that the fuse is intact in the supply line.
2. Refrigerator attempts to start, but does not operate.	– Low Voltage.	Install a line-correcting transformer in the mains, or a Voltage Stabilizer.
3. Refrigerator contents not cooling.	- Defrosting over due	Defrost the refrigerator.
-	 Restriction of cold air circulation. 	Provide space in between the dishes. If the shelves are covered with cloth or polythene, remove it.
	 Improper thermostat control selection. 	If the refrigerator is required to give a low temperature turn the thermostat knob towards colder (No.7) position.
	– Entry of hot air.	Opening and closing of the door too often will result in hot air from outside rushing into the refrigerator causing the temperature to go up. Reduce the frequency o opening of the door
	- Storing hot foods.	Avoid storing hot foods in the refrigerator, cool them to room temperature before placing them inside the refrigerator.
 Formation of water drops on exterior of refrigerator. 	– High humidity during mansoon season.	During the mansoon, when the humidity in the atmosphere reaches around 90% water droplets may form around the sides of the refrigerator cabinet, especially the top portion. This moisture should be wiped off periodically. Contact our servicemar to check the door seal for proper and uniform contact with the cabinet.
5. Formation of droplets on the underside of the Chiller tray.	 Hot and humid climate. 	In hot and humid weather the moist air rushes inside whenever the refrigerator door is opened. This results in excess frosting on the Evaporator, and condensation on the Chiller tray bottom. Avoid too frequent door openings.
6. Smell and odour.	 Improper covering and wrapping of food. 	Wrap and cover foodstuffs properly. Place caps on bottles and other liquid stores. If the smell persists, defrost the refrigerator, remove all foodstuffs, clean the refrigerator thoroughly and wipe it dry before restarting.
7. Difficulty in formation of ice and ice-cream.	 Incorrect thermostat setting. 	Set the thermostat on 'Colder' (No.7) position.
	-Defrosting overdue.	Excessive frost on the freezer, should be defrosted. Ensure that the container of ice- cream or ice is in proper contact with the surface of the freezer. Do not use bowls.


परेशानी पहचानिए – खुद सुधारिए

परेशानी	संभावित कारण	निवारण
1. रेफ्रिजरेटर काम नहीं करता.	थर्मोस्टेट का स्विच 'ऑफ' स्थिति में विद्युत आपुर्ति बंद.	देखिए कि थर्मोंस्टेट का नॉब सामान्य (नं.4) की स्थिति में हो, न कि 'ऑफ' स्थिति में. ये भी देख लीजिए कि रेफ्रिअरेटर की मेन्स सप्लाई का प्लग वॉल सॉकेट लगा हो औरआपूर्ति चालू हो, ये भी जांच लीजिए कि विद्युत लाइन में लगा फ्यूज ठीक हो.
 रेफ्रिजरेटर चालू होने लगता है पर काम नहीं करता. 	कम वोल्टेज.	मेन्स में लाईन – करेक्टिंग ट्रांसफॉर्मर लगाएं या वोल्टेज स्टेबिलाईजर का इस्तेमाल करें.
 रेफ्रिजरेटर में रखी सामग्री 	वक्त पर डीफ्रॉस्टिंग नही ठंडी नहीं होती.	रेफ्रिजरेटर को डीफ्रॉस्ट कीजिए, बर्तनों के बीच जगह बनाइए. शेल्फ कपडे या पॉलिथीन से ढकी हो की गई, ठंड हवा के तो उन्हें डटा दीजिए. अगर रेफ्रिजरेटर को कम तापमान पर रखना जरूरी हो तो थर्मोस्टेट नॉब को ठंडी स्थि
	प्रवाह में रूकावट. गलत थर्मोस्टेट नियंत्रण का चयन गर्म हवा का प्रवेश	(नं. 7) में घुमाएं बार–बार दरवाजा खोलने से बाहर की गर्म हवा रेफ्रिजरेटर से प्रवेश करती है. दरवाजा कम से कम खोलें.
	गर्म भोजन का भंडारण.	गर्म पदार्थ रेफ्रिजरेटर में रखने से बचें. रेफ्रिजरेटर में भंडारण से पहले उन्हें कमरे के तापमान तक ठंडा कर लें.
 रेफ्रिजरेटर के बाहर पानी की ब्दें जमना. 	मानसूनी मौसम के कारण अत्यधिक आर्द्रता.	मानसून के मौसम में जबकि वातावरण में आर्द्रता 90% तक हो जाती है तो रेफ्रिजरेटर कि बगल में, खास तौर प ऊपरी जिससे में पानी की ब्दें जम सकती है, इस नमी को समय-समय पर साफ करना चाहिए. हमारे सर्विस प्रतिनिधि को बुलाकर ये जांच करवा लीजिए कि दरवाजे केबिनेट के साथ एक समान संपर्क में है और अच्छी तरह बंद होते है.
 चिलर ट्रे के नीचे बूंदों का निर्माण होना. 	गर्म और आर्द्र मौसम.	गर्म और आई मौसम में जब भी रेफ्रिकरेटर का दरवाजा खोला जात है तो नम हवा अंदर प्रवेश कर जाती है. इससे इवापरेटर पर अत्यधिक फ्रॉस्ट जम जाती है. और चिलर ट्रे के नीचे बूंदें बन जाती है. इसलिए बार-बार दरवाजा न खोलें.
6. बर्फ और दुर्गंध	खाद्य पदार्थ ठीक से ढके और लपेटे नहीं गए.	दूसरे पात्रों पर ढक्कन लगाकर रखें. फिर भी गंध आए तो रेफ्रिजरेंटर से सब सामग्री निकाल लें, डीफ्रॉस्ट करें, अच्छ तरह साफ करें और फिर चालू करने से पहले सुखने दें.
 बर्फ और आइसक्रीम बननें में काठिनाई. 	थर्मोस्टेट की गलत स्थिति. वक्त पर डिफ्रॉस्टिंग नहीं.	थर्मोस्टेट को ठंडी (नं. 7) स्थिति में करें. फ्रिजर में जमी अत्यधिक फ्रॉस्ट (बर्फ कग) को डीफ्रॉस्ट कर लें. ये सुनिश्चित कर लें कि आईसक्रीम और बर्फ क पात्र फ्रीजर की सतह से अच्छी तरह संपर्क में हो, प्यालों का इस्तेमाल न करें.

INSTALLATION GUIDE

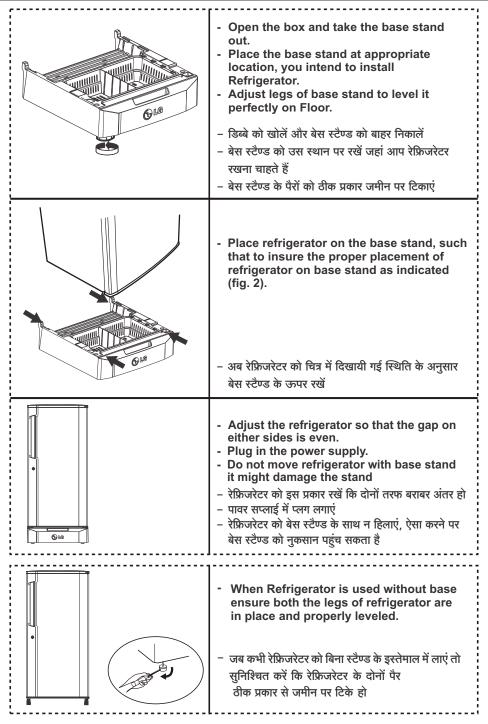

CAUTION : Ensure that the refrigerator is unplugged from the power source, before installation. सावधानी : रेफ्रिजरेटर को स्थापित करने से पहले यह अवश्य सुनिश्चित कर लें कि इसकाप्लग पावर सप्लाई से हटा हो ।

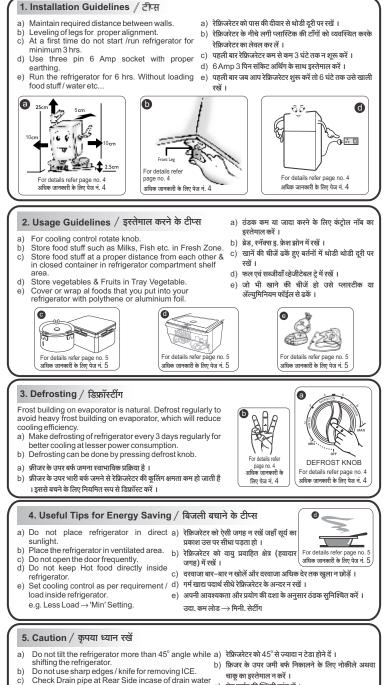

overflow. Condenser (Black mesh behind the refrigerator) d) कण्डेंसर (रेफ़्रिजरेटर के पीछे काली जाली) चलते समय गर्म d) may get warm during the run time. This is normal phenomenon

X

- Sweating / Water formation over refrigerator may e) फ्रीजर में पानी जमा होने की संभावना बारीश के मौसम में e) Wipe it with soft cloth.
- c) ड्रेन पाईप की स्थिती जांच लें।
 - हा सकता हैं । यह सामान्य प्रक्रिया हैं । ज्यादा हो सकती है ।





The LG Refrigerator comes with 1 + 4 year warranty, from the date of purchase, that comprises of a 1 year warranty on all Parts (except Light Bulb, Consumables, Loose Plastic Parts, Glass) in the first year and thereafter a 4 year Additional warranty on the compressor, from the date of purchase of the product, provided always that the warranty card bears the rubber stamp, date and signature of our Authorised Dealer.

4 YEAR ADDITIONAL WARRANTY ON COMPRESSOR

The 4 year warranty on Compressor will continue even after the expiry of 1 year period from the date of purchase. This warranty covers Compressor only. Gas/Gas Charging will be charged to the customer. Gas charging is included only when compressor is defective & inoperative. During the additional warranty period, it does not cover any part such as condenser, freezer, capillary, suction line, overload protector, relay, thermostal etc.. Standard visiting charges will be applicable within the municipal limit of town where LG Electronics India Pvt. Ltd. (LGEIL) has it's Authorized Service centre, Service outside municipal limit will attract to and fro traveling, other incidental expenses in addition to standard visiting from time to time. During the warranty period, only the parts replaced or repaired shall be free of costs, but service charges shall always be payable by the customer.

TERMS & CONDITIONS

- 1. The warranty is confined to the first purchaser of the Refrigerator only & is non-transferable.
- Repairs & replacements will be carried out by the dealer from whom the product has been purchased, or through the Authorized Service Centers of LGEIL. In case the customer shifts the place of residence during warranty period, it is advised to contact Authorized Service Centre directly or call our help line.
- 3. Repairs under warranty shall be carried out by an authorized service personnel only. The details of centralized help lines are attached.
- 4. For units installed beyond municipal limits of the jurisdiction of company's Authorized Service Center, it is responsibility of the purchaser to contact the nearest authorized service center and bring the unit to the authorized service center at its own cost and risk. All expenses incurred in collecting the units or parts thereof from the company's authorized service center, as well as expenses incurred with deputizing of service personnel/technicians towards conveyance and other incidentals etc. will be borne by the customer. Local Charges for transportation and handling charges may vary from location to location. Customers are advised to verify before. In case the customer desires to bring the unit on its own to the Authorized Service Centre, the same shall be at its own risks & consequences.
- 5. The concerned authorized service center will advise the customer whether to effect the repairs at site or at the authorized service center.
- Call registered with the centralized helpline/Authorized service center, wherein only cleaning of the unit/parts in the unit due to dust accumulation on portions of the unit, general explanations/returning, are not to be considered as defects.
- 7. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Replacement of parts would be purely at the discretion of LGEIL alone. In case the replacement of the entire unit is being made, (subject to the sole discretion of LGEIL), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with the model of price equivalent at the time of purchase.
- In case of any damage to the product / customer abuse/ repairs by un-authorised personnels/ misuse detected/ by the Authorized Service Center
 personnel, the warranty conditions are not applicable and repairs will be done subject to availability of parts and on a chargeable basis only.
- 9. This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect in the Refrigerator. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period.
- The company or its Authorized Service Center reserves the right to retain any part/s or component replaced at its discretion, in the event of a defect being noticed in the equipment during warranty period.
- 11. While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- 12. Warranty does not cover accessories external to the equipment supplied by the dealer.
- 13. If any coloured internal or external components are replaced, there will be commitment to ensure that the shades match with the original or other components. The replaced shades, patterns, tints may vary from the customer's unit due to continuous usage of the unit. Any matching components changed at customer's request will be on chargeable basis except the component which actually needed.

Warranty is not applicable in any of the following cases :

1. The warranty card is not completed properly at the time of purchase. 2. The completed warranty card is not presented to authorized service personnel at the time of service of the product. 3. The product is not operated according to instructions given in the Operating Instruction Booklet. 4. Defects are caused by improper or reckless use, which shall be determined by the company personnel. 5. Any repair work is carried out by persons other than authorized service personnel. 6. Defects are caused by due to causes beyond control like lightening, abnormal voltage, acts of God or while in transit to service center or purchaser's residence. 7. The warranty is not valid in case, the serial number is deleted, defected or altered. 8. Damage to the product or any part/s due to transportation or shifting is not covered by warranty. 9. a) This warranty will automatically terminate on the expiry of the warranty period of 12 months, even if the Refrigerator may not be in use for any time during the warranty period for any reason. b) The warranty on compressor will automatically terminate on expiry of 4 years (after 1 year warranty period even if the Refrigerator may not be in use for any time during the warranty not be in use for any time during the warranty not. 0. Only courts in state of Delhi and places where LGEIL has it's branch office shall have the jurisdiction for settling any claims, disputes arising under the warranty.

CUSTOMER'S COPY				
MODEL No. :	DATE OF PURCHASE :			
UNIT SERIAL No. :				
CUSTOMER'S NAME & ADDRESS	DEALER'S NAME & ADDRESS			

This card is valid only if it is filled in and stamped by our authorised dealer on the date of purchase.

For any further information, please contact LGEIL Branch

BRANCH	ADDRESS	PH NO\FAX NO.
Ahmedabad	LGEIL,233-234, Platinum Plaza, Nr. Judges Bunglow cross Road, Bodakdev , Ahmedabad - 54	40040013-14
Asansol	LGEIL,Block-E,Ist Floor, P C Chattarjee Market,Rambandhu Tala,GT Road (E) Asansol-713303	3292009/3292010 Fax No:- 2215170
Aurangabad	LGEIL,302 CIDCO No 3, Opp Hotel Ramgiri ,Jalna Road,Aurangabad - 431003	5625705/(FAX)2474055/32095436/
		32095437/32095438
Bangalore	LGEIL, No. 914, 2nd Floor, Shri Venkateshwara Complex, Opp. IBP Petrol Bunk, 80ft Road, 6th Block,	41145145/41144750/41144751
	Koramangala - Banglore - 560095	
Bhopal	LG Electronics India Private Limited, 2nd Floor, Alankar Complex, Plot No.10, M.P. Nagar Zone - II,	4262847/4229861(FAX) 4262848
	BHOPAL-PIN 462011.	0504.000.0504000
Bhubaneshwar Calcutta	LGEIL, Plot No.02,1st Flr.,Bapuji Nagar, Bhubaneshwar-751009 LGEIL, 1,Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Calcutta-700071	2531430, 2534280 22883254 (51) FAX
Chandigarh	LGEIL, I, Ho-Chi-Min-Sarah, dti Filoo, Metro Towers, Calculta-700071 LGEIL, SCO No. 142-143, 3rd Filoor, Sector-34A Chandigarh160002	5087389\90 (Fax) 5089107
Chennai	LGEIL, 600 No. 142 140, 600 Holl, 6000 GAX Gilanagam, 100002	65510501~04 fax 26203506
Cochin	LGEIL,40/1270, Vasudeva Buildings, T.D.Road ,Ernakulam Cochin-682011	2369765,2369743 ,2370744,
		4027444,4027555, 2360977(Fax)
Coimbatore	LGEIL, 250a, Sanganur Main Road, Kannappa Nagar, Coimbatore-641027	2332197 ,2332195
Delhi	LGEIL, A-27, Mohan Co-operative, Industrial Estate, New Delhi	26991412/11/13 (Fax)26991410
Dehradun	LGEIL, M - 22, Commercial Motors Compound, Mohabewala Indl. Area, Delhi-Saharanpur Road,	2644213/283
	Dehradun (Uttarakhand)	
Gurgaon	LGEIL,II nd Fir, A Block, Centre Point Bldg, Sushant Lok , PH-I, Gurgaon-122001	4047461-62 - 63/4272867
		4047460 (Fax)
Ghaziabad	LGEIL, ,J-10, RDC Rajnagar Ghaziabad - 201001	9811354152/3/64/65/266
Guwahati	LGEIL, Shantineer Bhawan, C K Aggarwal Path, Chenikurthi, Guwahati-781003	2663895/2666958/2665983/
		2668984- Telefax
Hyderabad	LGEIL, 1st Floor, Survey No.54, Pulla Reddy Building, Vikarampuri Main Road Kharkhana, Secunderabad -500009	27207504,05,06/27204094 27201462(Fax)
Hubli	LGEIL, 1 Floor, Above Bellad & Co., Near Bannigida Busstop, Gokul Road Hubli-580030	4250251/52
Indore	LGEIL, I Floor, Audre Bellau & Co., Near Bannigua Bussiop, Gokul Road Hubir-300030	4250251752 4065523~24, 4082157(Fax)
Jaipur	LGEIL, Stull., Sud Barsi Nade Cente, Strans, N.C. Koad, Indoe 42200	5111118/5113028/5105392
ouipui		5111540 (fax)
Jammu	LGEIL, Plot No52, Yard No. 6, Transport Nagar, Narwal, Jammu-180006	2477420, 2477419, 2474396, 2474384
Jodhpur	LGEIL,22(1-A)/21(2-B)/2, RIICO Heavy Industrial area, Jodhpur - 342003	2742384,392 5120030 (Fax)
Karnal	LG ELECTRONICS INDIA PVT LTD, Super Tyre Building, Near New Anaj Mandi, Opp , New World Restauarnt,	2219201,2219202 (Telefax)
	G.T Road Karnal,Haryana	
Lucknow	LGEIL,B- 537,Hari Kunj, Keshav Nagar, Sitapur Road Lukhnow -226020	2757538,39,2759121 (FAX) 2757559
Ludhiana	LGEIL, Village Jhande, Near Badowal Railway Station, Opp ferozpur Road Ludhiana.	2804412 - 19
Mumbai(N & S)	LGEIL, Trade Star, 4th Floor, A Wing, J.B Nagar, Andheri Kurla Road, Andheri (E) Mumbai-400059	28352882-2887 28352889 (fax)
Nagpur	LGEIL, 5a,Road No.13,Behind Msrtc Workshop, MIDC Hinga,Nagpur-440016	235120, 235122, fax 234401
Patna Pune	LGEIL, 2nd Floor, Ankit Chandra Deep Complex, Bander Bageecha, Near Samrat Hotel, Patna- 800001. LGEIL, 105/106, Premium Point,GM Road, Opp Modern High School,IIIrd Floor,Shivaji Marg,Pune -411005	3298714 2541845(Fax) 66030100,732/733/734/735
Fulle	LOEIL, 100/100, Fremulti Folit, Six Road, Opp woden Figh School, into Floor, Shivaji warg. Fune -411003	66030740 (Fax)
Rajkot	LGEIL, Sanskruti Apartment, Opp. Dr. Ambedkar Bhawan , Near Atithi Chowk , Akshar Road , Rajkot - 360004	2481499,2467692(FAX)
Raipur	613 to 616 ,6th Floor, Offizo,Magneto - The Mall,GE Road, Raipur-Pin - 492001	4053171/4037470
		(Fax) 4038426/10/11
Ranchi	LGEILI,402,Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	3294026, 2331815
Surat	LGEIL1001-1004, Ascon Plaza, IInd Fir, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat-395009	2730982/83 2730984(Fax)
Thane	LGEIL,Gall Shop No - 206,207 , 2nd Floor , Sai Plaza , Above Vijay Sales Opp. Cine Wonder Mall , Ghodbunder Road , Thane(West)-400607	25472633/2637 25472602(FAX)
Varanasi	LGEIL, Pama Complex, DLW, Lahartara Road, Shivdaspur, Manduadih, Varanasi UP-221002	2373432/36/37
Vijaywada	LGEIL, Door No 32-2/1-7, Ratnamamba Street, Prajasakti Nagar, Vijaywada - 520010, Andhra Pradesh	2497283/87 (Fax) 2497284
Warangal	LGEIL,HOUSE NO. 1-8-598/1 FIRST FLOOR, BESIDE HDFC BANK NAKKALGUTTA, HANAMAKONDA-506001 (WARANGAL)	2551453
KOZHIKODE	3/568, THRIPURI BUILDING, WAYANADU ROAD, FIRST FLOOR, NEAR K.S.F.E., EAST NADAKKAVU,	2366755, 2366756, 2366678
	CALICUT-11,PIN-673011	(Fax) 2766678